


65C102 CO-PROCESSOR USER GUIDE

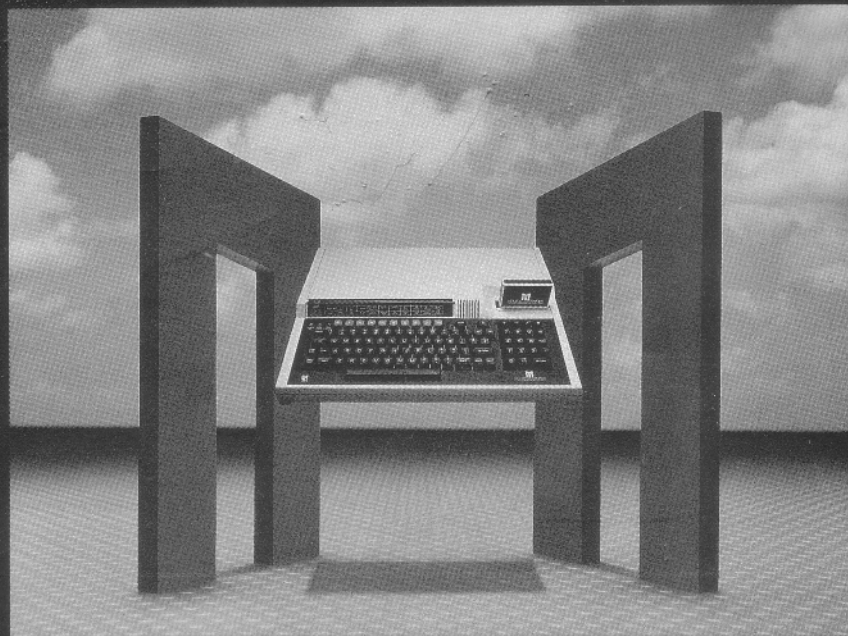

BRITISH BROADCASTING CORPORATION
MASTER SERIES MICROCOMPUTER

Within this publication the term 'BBC' is used as an abbreviation for 'British Broadcasting Corporation'.

°Copyright ACORN Computers Limited 1985

Neither the whole or any part of the information contained in, or the product described in, this manual may be adapted or reproduced in any material form except with the prior written approval of ACORN Computers Limited (ACORN Computers).

The product described in this manual and products for use with it, are subject to continuous development and improvement. All information of a technical nature and particulars of the product and its use (including the information and particulars in this manual) are given by ACORN Computers in good faith. However, it is acknowledged that there may be errors or omissions in this manual. A list of details of any amendments or revisions to this manual can be obtained upon request from ACORN Computers Technical Enquiries. ACORN Computers welcome comments and suggestions relating to the product and this manual.

All correspondence should be addressed to:

Technical Enquiries
ACORN Computers Limited
Newmarket Road
Cambridge
CB5 8PD

All maintenance and service on the product must be carried out by ACORN Computers' authorised dealers. ACORN Computers can accept no liability whatsoever for any loss or damage caused by service or maintenance by unauthorised personnel. This manual is intended only to assist the reader in the use of this product, and therefore ACORN Computers shall not be liable for any loss or damage whatsoever arising from the use of any information or particulars in, or any error or omission in, this manual, or any incorrect use of the product.

This manual is for the sole use of ACORN Computers' authorised dealers and must only be used by them in connection with the product described within.

ACORN is a trade mark of ACORN Computers Limited

First published 1985

Published by ACORN Computers Limited

Cover design concept by Carrods Graphic Design

65C102 co-processor user guide

Part No. 0443,030

Issue No.2

April 1986

CONTENTS

Section	Page
INTRODUCTION	3
Dismantling the microcomputer	5
Installing the co-processor printed circuit board	5
SYSTEM MEMORY	9
The 65C102 co-processor support disc	11

INTRODUCTION

What is a co-processor

The job of the co-processor is to run languages such as BASIC, assembly language, word processing, and to run user programs. The TUBE handles the two-way communication between the microcomputer and the co-processor thereby leaving the microcomputer and the co-processor to continue with their respective tasks.

With the co-processor fitted, the job of the microcomputer is to serve as an I/O processor, that is, to handle all the inputs and outputs (keyboard, RS423, text and graphics output to monitors, printer output, disc drives, cassette recorders, local area network and so on).

This co-processor consists of a 65C102 microprocessor system with 64 Kbytes of Random Access Memory (RAM). In addition, it contains an interface between itself and the microcomputer called the TUBE.

From this point on the microcomputer will be referred to as the I/O processor.

Fitting a co-processor

Note that any modification or upgrade carried out to the printed circuit board of any Acorn equipment is undertaken at the sole risk of the person carrying out the modification or upgrade. No claim for loss or damage to the equipment caused by the modification or upgrade of the printed circuit board by unqualified personnel shall be accepted by Acorn Computers limited.

WARNING - A number of the components used within ACORN equipment are STATIC SENSITIVE. All usual anti-static precautions must be taken to prevent damage to these devices.

Before attempting this upgrade, please read all the instructions carefully. If you are in doubt about your ability to carry it out, the co-processor and the microcomputer should be taken to your nearest authorised Acorn dealer.

A charge may be levied by the dealer for installing the co-processor; such a charge shall be entirely at the discretion of the dealer concerned.

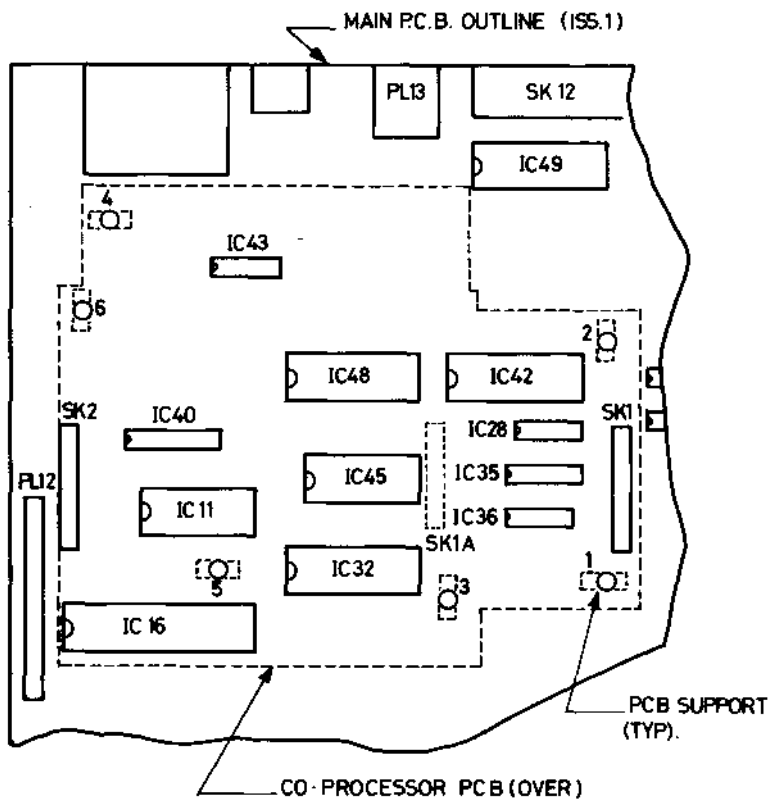


FIGURE 1

Dismantling the microcomputer

Before attempting to fit the co-processor to your machine, first ensure that the unit is disconnected from the mains power supply.

The upper half of the case must be removed from the unit to allow access to the main printed circuit board. To do this, turn the computer upside down and place it on a firm, flat surface; locate and remove the four fixing screws that hold the upper half of the case in place. These screws are located on the underside of the unit, two at the rear and two at the front of the machine, and are labelled 'FIX'. Please note that the two fixing screws fitted to the rear fixing positions are longer than the other two.

When the fixing screws have been removed, carefully re-invert the computer whilst holding the two halves of the case together. The upper half of the case may now be removed by lifting it directly upwards from the machine.

Installing the co-processor printed circuit board

Included in the co-processor upgrade kit are a number of plastic printed circuit board support posts. These must be fitted to the main printed circuit board before installing the co-processor board.

The positions at which these posts are to be fitted are shown in figure 1. The posts should be fitted to the positions in numerical order. The first four positions are common to all co-processor options, with positions five and six only in use with certain co-processors. When fitting the P.C.B supports, ensure that the base flange does not interfere with any component on the P.C.B. To fit the support, insert one end into the hole in the P.C.B and press down gently.

When the support is correctly fitted, it will not be possible to withdraw it from the hole in the P.C.B. Care must therefore be taken to ensure the correct positioning of the P.C.B support before pressing it home.

When all the P.C.B supports are installed on the main P.C.B, the co-processor should be placed in position ensuring that:

1. The pins of PL1 on the co-processor are aligned with the corresponding holes in SK1 on the main P.C.B.
2. The pins of PL2 on the co-processor are aligned with the corresponding holes in SK2 on the main P.C.B.
3. The P.C.B supports are aligned with the corresponding holes on the co-processor P.C.B.

When you are satisfied that all the pins and supports are correctly aligned, the co-processor P.C.B may be pressed gently into place. The co-processor is correctly seated when the barbs on the tip of the P.C.B supports have cleared the surface of the co-processor

P.C.B. An audible click should be heard when the barbs spring into place securing the P.C.B.

Take care not to exert too much pressure when pressing home the co-processor P.C.B, this may lead to damage to the various connectors.

When the co-processor P.C.B has been installed, the re-assembly procedure is the reverse of the dismantling procedure.

When the 65C102 co-processor has been installed, the machine should be set up as described in the WELCOME GUIDE. When the machine is switched on a message, similar to the following, should appear on the screen.

ACORN MOS

ACORN ADFS

BASIC

>_

As can be seen from the above message, the 650102 co-processor does not appear to be present. The reason for the apparent absence of the co-processor is the CONFIGURATION status of the machine.

To reconfigure the machine to allow for the inclusion of the 65C102 you must use either a *CONFIGURE command, or the control panel included with the WELCOME package. To use the *CONFIGURE command you should enter:

*CONFIGURE TUBE <RETURN>

followed by

*CONFIGURE INTUBE <RETURN>

after entering these two commands you must perform a hard reset by holding down the CTRL key whilst pressing and releasing the BREAK key. This reset is needed to enable the I/O processor to recognise the presence of the co-processor.

After performing the reset, the following message, or something similar, should be displayed:

ACORN TUBE 65C102 CO-PROCESSOR

ACORN ADFS


BASIC

>_

The top line of the display shows that the TUBE and 65C102 co-processor are now recognised by the machine. If the message on your machine does not indicate the presence of the 65C102 co-processor then first use the *STATUS command to determine whether the TUBE is correctly configured, and assuming that the configuration is correct, refer to the earlier part of this section to check that the upgrade has been carried out correctly.

If neither of these courses of action uncover the cause of the problem, the complete machine should be taken to your nearest Acorn registered dealer for testing and, if necessary, repair.

FIG. 2 THE SYSTEM MEMORY MAP

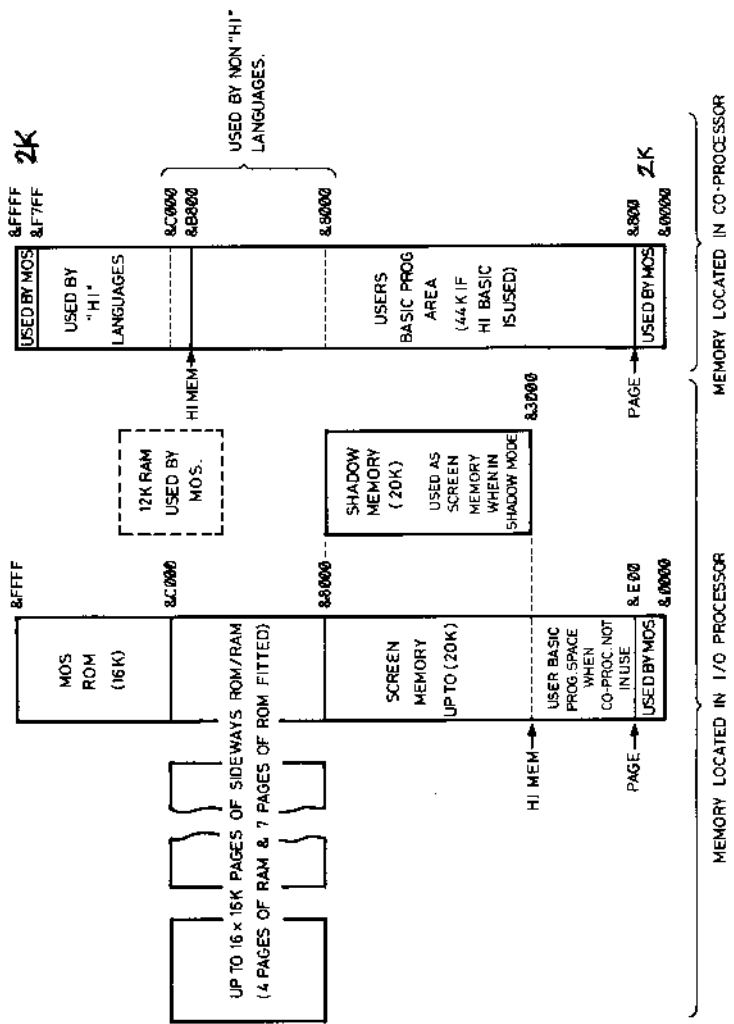

The *CONFIGURE command

The *CONFIGURE command may be used to enable and disable the TUBE communications. It may also be used to select between internal and external TUBE communication. To enable or disable the TUBE communication, *CONFIGURE with TUBE or NOTUBE respectively may be used.

To allow you to add an external co-processor, sometimes referred to as a second processor, you may switch from using the internal TUBE to the external TUBE. This is also carried out using the *CONFIGURE command, this time with INTUBE and EXTUBE respectively.

For further information on the *CONFIGURE command see the REFERENCE MANUAL Part 1.

SYSTEM MEMORY

The following information explains the way in which the memory of both the I/O processor and the co-processor are configured. It is only intended as a general introduction to the memory usage of the two processors. For a more full explanation of the way in which the memory is configured please refer to the REFERENCE MANUAL.

Please note that whilst a general understanding of the systems' memory configuration may be of use, it is by no means essential.

Figure 2 shows the memory map for the I/O processor when it is working with the 65C102 co-processor.

DISTINGUISHING BETWEEN MEMORIES

You will have noticed from the memory map that both the I/O processor and the co-processor are numbered from &0000 to &FFFF. With the co-processor working, the various filing systems must have a way of distinguishing between the two memories in order to SAVE or LOAD programs into the correct place. This is done by defining the co-processor memory as running from &0000 to &FFFF, and the I/O processor memory from &FFFF0000 to &FFFFFFFF.

For example, memory location &C000 resides, by definition, in the co-processor: memory location &FFFFC000 resides in the I/O processor.

Suppose you run a machine-code program which resides in the co-processor from memory location &6000 to &6500. This program draws a pretty picture on the screen in MODE 1, and you would like to save both the program and the resulting picture onto disc.

To save the program onto disc, you would type:

```
*SAVE GRAFPRG 6000 6500 <RETURN>
```

where GRAFPRG is the filename you have chosen. To load and run the

program from disc, you would type:

```
*RUN GRAFPRG <RETURN>
```

The program would be loaded back into the co-processor rather than the I/O processor (no leading 'FFFFs' in the load address and end address), and would run.

To save the resulting picture onto disc, you would have to save the screen memory used in MODE 1, this resides in the I/O processor.

MODE 1 screen memory starts at &FFFF3000 and ends at &FFFF7FFF (ie memory locations &3000 to &7FFF in the I/O processor). To save the resulting picture, you would type:

```
*SAVE PICTURE FFFF3000+5000 <RETURN>
```

where PICTURE is the filename you have chosen. If you now reload this by typing:

```
*LOAD PICTURE <RETURN>
```

the file PICTURE will be loaded into the I/O processor, and as long as you are already in MODE 1, the picture will reappear. (From this you can probably deduce why some programs that directly access the screen will not work with the co-processor.)

Note: It is not possible to save a shadow screen in this way. To save or load a shadow screen you must make use of either the OSWORD calls &5 and &6, or the *FX114 command to 'switch' SHADOW RAM into the main memory map. For further information, please refer to the REFERENCE GUIDE.

You may have noticed that when you execute a *INFO on a disc file, addresses are preceded by either 00 or FF, rather than 0000 and FFFF. For example typing:

```
*INFO PICTURE <RETURN>
```

might display

```
$.PICTURE      FF3000 FF3000 FF4FFF 07A
```

and typing

```
*INFO GRAFPRG <RETURN>
```

might display

```
$.GRAFPRG      006000 006000 000500 05B
```

The disc filing system ignores the two most significant bytes of the addressing, the cassette filing system displays the addressing in full.

IMPORTANT: It is only the filing systems that recognise these 'extended' addresses. Current versions of BASIC and HI-BASIC make no such distinction. Only the memory in the co-processor can be directly accessed from BASIC. This means that using the ?,! and \$ indirection operators to access memory locations in the I/O processor from the co-processor doesn't work, for example:

```
?&FFFF2000=&55 <RETURN>
```

will put the value &55 into memory location &2000 in the co-processor and not into the location &2000 in the I/O processor as specified by the leading FFFFs.

The same applies to saving and loading BASIC programs. If you save a BASIC program to disc or cassette from the microcomputer, executing a *INFO will display addresses with leading FFs. Saving a BASIC program from the co-processor and executing a *INFO will display addresses with leading 00s. However, BASIC will always load either program into whichever processor is currently running BASIC.

It is possible to read and write to memory locations in the I/O processor memory, this is done using OSWORD calls 5 and 6. OSWORD calls are dealt with in the REFERENCE MANUAL Part 1. A more advanced description of TUBE communication techniques is contained within the ADVANCED REFERENCE MANUAL.

The 65C102 co-processor support disc

The disc supplied with the 65C102 contains 3 pieces of software, these are:

HiBASIC

HiEDIT

Printer buffer utility

Hi languages

HiBASIC and HiEDIT are the same languages BASIC and EDIT that are already resident in your machine. They only differ from the inherent versions in the position that they expect to occupy within the memory map.

If we consider the memory map of the microcomputer without a co-processor attached (fig.2), we can see that BASIC normally resides between &8000 and &BFFF. If BASIC were allowed to do this within the co-processor, it would substantially reduce the amount of RAM available to the users programs. HiBASIC is supplied to overcome this situation, it does so by locating itself between addresses &B800 and &F7FF in the co-processor thereby allowing the user to maximise the RAM available. HiEDIT, in this respect, acts in exactly the same way as HiBASIC.

To use either HiBASIC or HiEDIT, insert the 65C102 support disc into the disc drive and enter:

*HiBASIC <RETURN>

(or)

*HiEDIT <RETURN>

depending on the language you wish to use.

Printer buffer utility

On the 65C102 Support Disc, along with HiBASIC and HiEDIT, you will find a file called BUFFER. •

A buffer is an area of RAM that is used as a 'holding area' for data that is in transit between the microcomputer and an external device. The RAM may be part of either the microcomputer, or the external device, and is part of the communications pathway through which the two devices communicate.

The size of a particular buffer can make a considerable difference to the speed and efficiency of a given data transfer. In the case of the microcomputers' printer buffer, there is a 256 byte area of RAM allocated to this purpose. This means that as soon as the microcomputer has transmitted 256 bytes of data more than the printer has accepted, the buffer will become full, and the microcomputer will be forced to wait until more space becomes available in the printer buffer.

The length of time the computer, and therefore the operator, spends waiting is dependant upon three things:

- a) The speed at which the printer can print
- b) The size of the receive buffer contained within the printer
- c) The size of the transmit buffer in the microcomputer

Both a) and b) are determined by the design of the printer and are not easily changed; the size of the default printer buffer in the microcomputer is also fixed. It is however possible to re-allocate the area of the microcomputers' memory to be used as a printer buffer; this is the function of the printer buffer utility.

This utility provides you with an approximately 24 Kbyte buffer in the I/O processor for use with your currently selected printer. This dramatic increase in buffer size means that the computer will not have to wait for the printer unless the data to be printed exceeds 24 Kbytes. In the instance of a text file, this may be considered to be roughly equivalent to 24 A4 pages of text, sufficient to hold the entire textual content of this manual with room to spare!

This buffer uses RAM in the I/O processor between &4000 and &8000 and should not be used where your own application makes use of this area of I/O memory. Since the area of memory used by the printer buffer utility is the same as that available to the user when a co-processor is not in use; this utility may only be used in conjunction with a co-processor.

To make use of the printer buffer utility, you should enter:

*BUFFER

It is important to realise that, whilst you are able to continue using a word processor, or other language resident in the co-processor, it is not possible to make use of the main RAM in the I/O processor whilst the printer buffer is in use. This will preclude the use of a number of other utilities such as AFORM and the Q parameter available with the sideways RAM utilities. Also, you should realise that a 20 Kbyte text file can take as much as 15 minutes to print on a slower printer. The microcomputer should be neither reset or switched off whilst the printer is still printing.

For further information on the use of printers, please refer to the WELCOME GUIDE that accompanied the microcomputer.

Acorn 
The choice of experience.

Acorn Computers Limited
Fulbourn Road
Cherry Hinton
Cambridge CB1 4JN
England